

# DAEWOO

ELECTRICALS



---

## True Wireless Speakers

User Manual



## **IMPORTANT SAFEGUARDS**





**When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:**

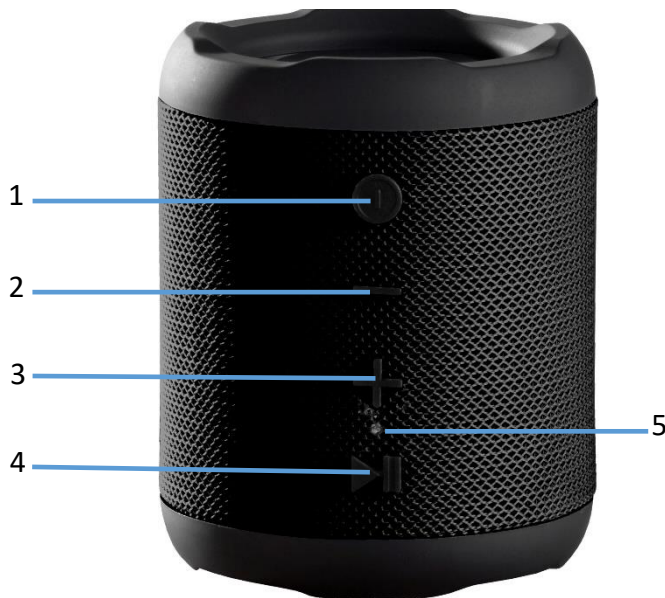 
- Read and familiarise yourself with all operating instructions before using these Speakers.
- Before plugging your units into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Ensure that there is clearance of at least 100mm (4 Inches) minimum around the Speakers for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the Speakers.
- Do not position the Speakers close to sources of heat such as radiators, heaters, other electronic equipment, etc.
- The Speakers shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not immerse the Speakers in water or any other liquids.
- Do not leave the Speakers unattended during use.
- Do not leave the Speakers unattended whilst connected to a USB supply.
- Close supervision is required when using these Speakers near children.
- Never leave these Speakers within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be

made by children without supervision.


- Children of less than 3 years should be kept away unless continuously supervised.
- Do not use these Speakers outdoors.
- It is imperative to unplug the power supply after the Speakers have been used, before they are cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- Do not operate these appliances after a malfunction or after being dropped or damaged in any way.
- Do not allow the USB cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the USB charging cable under carpets, rugs, etc.
- This product is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this product other than those supplied or recommended by supplier.
- Do not use this product for anything other than its intended use.
- Do not push objects into any openings as damage to the product and/or electric shock may occur.

## Description of Parts – Front Panel Controls

1.  – Press to power up, power off and Bluetooth pair the speakers.
2.  – Press to skip to the **previous** next track or press and hold to decrease the volume.
3.  – Press to skip **forwards** to the next track or press and hold to increase the volume.
4.  – Press to Play/Pause/Phone the track you are playing.
5. LED Indicator.



## Description of Parts – Rear Panel

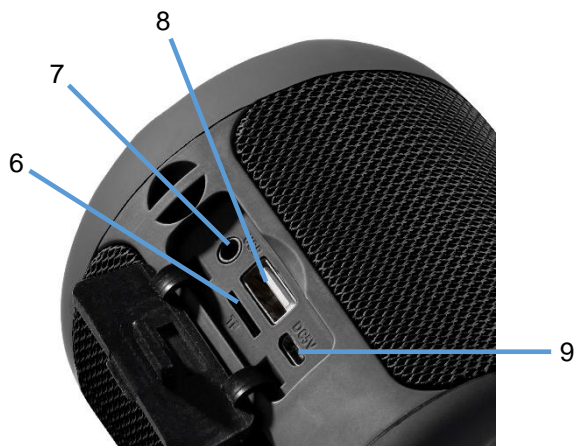 

6. **MICRO SD** – Micro SD/TF Card Player
7. **AUX** – External 3.5mm input.
8. **USB** – USB Memory Stick Port.
9. **Micro USB** DC Port
10. USB Charging Cable
11. Micro USB Plug.
12. 3.5mm Jack to Jack Lead.



## Before the first time you use your TWS Speaker

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.





 
 
## Charging the internal Battery

*Before use, please ensure that the internal rechargeable batteries are fully charged as follows:*

1. Insert the **Micro USB Plug** (11) of the **USB Charging Cable** (10) into the **Micro USB DC Port** (9) on rear panel of the Speaker to charge the internal battery.
2. Insert the large USB plug on the other end of the **USB Charging Cable** (10) into a suitable USB charger rated at 5 volts 1 amp minimum.
3. **The LED Indicator** (5) will light red to show the internal battery is charging. Once the battery is fully charged, the **LED Indicator** (5) will go out showing that the internal battery is fully charged and the **USB Charging Cable** (10) can be removed.  
**NB** the Speaker can be used normally during charging.


 

## Operating Instructions

### Using the Bluetooth Mode


1. Press and hold the Power button  (1) on the front Panel for three seconds to power up the speaker.
2. The LED Indicator (5) will quickly flash blue.
3. Enable the Bluetooth mode on your Phone, Tablet or other Bluetooth compatible device and set it to search.
4. Select '**AVS1406**' from the search results found by your device which will now pair with the speaker. Once the device has paired with the speaker the LED Indicator (5) will light steady blue and the speaker will chime.
5. Enable the music player on your Phone, Tablet or other device you are using.
6. Press the **Play/Pause/Phone** button (4)  to start and stop (pause) the connected device playing.
7. Use the Skip Back  (2) and Skip Forward  buttons (3) to change the track being played.
8. Press and hold the Skip Back  (2) and Skip Forward  buttons (3) to decrease and increase the volume level.
9. Alternatively use your devices controls in the usual manner.  
**NB** the LED Indicator (5) will flash slowly whilst music is playing.

### Using the AUX/LINE Input

*The AUX/LINE Input allows a direct wired connection of an external audio device (such as a mobile phone, music player, etc.) via a 3.5mm jack socket input on the rear Panel.*

1. Press and hold the Power button  (1) on the front Panel for three seconds to power up the speaker.
2. Insert a **3.5mm jack to jack lead** (12) into the **AUX** socket (7) on the rear panel of the Speaker.
3. The speaker will automatically detect the lead and switch to AUX mode.
4. Insert the other end of the lead into the device you are playing from.
5. Press and hold the Skip Back  (2) and Skip Forward  buttons (3) to decrease and increase the volume level.

### Playing Music from a USB Memory Stick

1. Press and hold the Power button  (1) on the front Panel for three seconds to power up the speaker.

2. Insert a USB Memory Stick (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **USB memory stick port** (8) on the rear panel. **NB** the USB port supports USB 2.0 and up to 32GB capacity max.
3. The tracks on the memory stick will begin to play automatically.
4. Press the **Play/Pause/Phone** button (4) ►|| to start and stop (pause) the USB memory stick.
5. Use the Skip Back — (2) and Skip Forward + buttons (3) to step through the tracks on the memory stick.
6. Press and hold the Skip Back — (2) and Skip Forward + buttons (3) to decrease and increase the volume level.

### **Playing Music from a Micro SD/TF Card**

1. Press and hold the Power button ① (1) on the front Panel for three seconds to power up the speaker.
2. Insert a Micro SD or TF card (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **MICRO SD/TF Player** (6) on the rear panel. **NB** the Micro SD/TF card player supports cards up to 32GB capacity max.
3. The tracks on the card will begin to play automatically.
4. Press the **Play/Pause/Phone** button (4) ►|| to start and stop (pause) the SD/TF card player.
5. Use the Skip Back — (2) and Skip Forward + buttons (3) to step through the tracks on the memory card.
6. Press and hold the Skip Back — (2) and Skip Forward + buttons (3) to decrease and increase the volume level.

### **Handling Telephone Calls**

#### **Answering a Call**

1. A call coming in will mute (cut) the music you are listening to and the speaker will make a ringing sound.
2. Press the **Play/Pause/Phone** button (4) ►|| to answer the call.
3. Press and hold down the Skip Forward + button (3) to increase the call volume level.\*
4. Press and hold down the Skip Back — button (2) to decrease the call volume level.
5. Press the **Play/Pause/Phone** button (4) ►|| again to end the call.
6. The callers voice will be heard through the speaker and your voice will be picked up by the built in Microphone.

#### **Rejecting a Call**

1. A call coming in will mute (cut) the music you are listening to.
2. Press and hold the **Play/Pause/Phone** button (4) for two seconds to reject the call.



 
 
 
 

#### **Redialling the Last Call Made**

1. Briefly press the **Play/Pause/Phone** button (4) twice to redial the last number you called.
2. Briefly press the **Play/Pause/Phone** button (4) once to end the call.

\*A beeping tone will be heard warning when the maximum volume setting has been reached.

### **TWS (True Wireless Stereo) mode**

*TWS mode enables two fabric speakers to be used together producing stereo sound whilst using them in Bluetooth mode, follow the below steps to pair the two speakers together using Bluetooth:*

1. Take both speakers and press and hold the Power buttons  (1) on both speakers for three seconds to power up the speakers.
  2. Press and hold the **Play/Pause/Phone** button (4)  on both speakers for three seconds and the two speakers will automatically pair together.
  3. Connect to the speakers via Bluetooth as described in 'Using Bluetooth Mode' above.
  4. Enable the music player on your Phone, Tablet or other device you are using.
  5. Briefly press the **Play/Pause/Phone** button (4)  on either speaker to start and stop (pause) the connected device playing.
  6. Use the Skip Back  (2) and Skip Forward  buttons (3) on either speaker to change the track being played.
  7. Press and hold the Skip Back  (2) and Skip Forward  buttons (3) on either speaker to decrease and increase the volume level.
  8. Alternatively use your devices controls in the usual manner.
- NB** True Wireless Stereo pairing is only available in Bluetooth mode.

### **Care and Use of your Speakers**

- Always disconnect the Speakers from the USB charging supply before cleaning.
- Clean outside of the Speakers with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the Speakers in water or any other liquids.

### **Technical Specification**

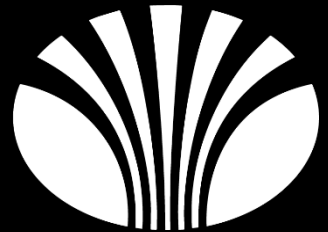 
Model Number	AVS1406, AVS1431 and AVS1432
Power Supply/Charger	DC 5V @1A
Total audio output power	5W
Speaker size and rating	52mm 4Ω 5W
Audio Frequency Response	100Hz – 20KHz
Aux input sensitivity	300mV
Unpacked Weight	Approx. 320gs
Dimensions (Approx.)	Approx. 88mm (dia.) x 107mm (h)
Operation temperature	0°C to + 40°C
Built in Battery type	Lithium Ion, 1200 mAh 3.7V
Bluetooth Frequency Range	2402 - 2480MHz
Bluetooth Transmission power	≤-3.325dBm
This product conforms to Radio Equipment Directive 2014/53/EU	



Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

# DAEWOO

## ELECTRICALS



### GUARANTEE

This product is guaranteed for twenty-four months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Daewoo Electricals is a registered trademark.  
Produced and imported under licence by ESG Ltd  
Manchester M3 1JS [www.esgltd.com](http://www.esgltd.com)