



---

## Bluetooth Speaker with Voice Assist

User Manual



## **IMPORTANT SAFEGUARDS**






**When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:**

- Read and familiarise yourself with all operating instructions before using this Speaker.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Ensure that there is clearance of at least 100mm (4 Inches) minimum around the Speaker for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the Speaker.
- Do not position the Speaker close to sources of heat such as radiators, heaters, other electronic equipment, etc.
- The Speaker shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not immerse the Speaker or its supply in water or any other liquids.
- Do not leave the Speaker unattended during use.
- Do not leave the Speaker unattended whilst connected to the USB supply.
- Close supervision is required when using this Speaker near children.
- Never leave this Speaker within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be

made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.
- Do not use this Speaker outdoors.
- It is imperative to unplug the power supply after the Speaker has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- Do not operate this appliance after a malfunction or after being dropped or damaged in any way.
- Do not allow the power cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the USB charging cable under carpets, rugs, etc.
- This product is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this product other than those supplied or recommended by supplier.
- Do not use this product for anything other than its intended use.
- Do not push objects into any openings as damage to the product and/or electric shock may occur.

## Description of Parts – Top Panel Controls

1.  – Press to **Play/Pause/Phone**.
2. LED Indicator.
3.  – Press for power On/Off.
4.  – Press to **Skip forwards** to the next track or press and hold for volume increase.
5. Microphone (used for phone calls and voice assistant).
6.  - Voice Assistant button.
7.  – Press to **Skip back** to the previous next track or press and hold for volume decrease.
8. LED Lights.



## Description of Parts – Rear Panel & Accessories

9. AUX – External 3.5mm input.
10. Micro USB DC Port.
11. Cover.
12. USB Charging Cable.
13. Micro USB Plug.
14. 3.5mm Jack to Jack Cable



## **Before the first time you use your Bluetooth Speaker**

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.

### **Charging the internal Battery**



*Before use, please ensure that the internal rechargeable battery is fully charged as follows:*

1. Insert the **Micro USB Plug** (13) of the **USB Charging Cable** (12) into the **Micro USB DC Port** (10) on rear panel of the Speaker to charge the internal battery.
2. Insert the large USB plug on the other end of the **USB Charging Cable** (12) into a suitable USB charger rated at 5 volts 1 amp minimum.
3. The **LED Indicator** (2) on the top panel will light red to show the internal battery is charging. Once the battery is fully charged, the **LED Indicator** (2) will go out showing that the internal battery is fully charged and the **USB Charging Cable** (12) can be removed.

**NB** the Speaker can be used normally during charging.


## **Operating Instructions**

### **Using the Bluetooth Mode**

1. Press and hold the Power button  (3) on the Top Panel for three seconds to power up the speaker.
2. The **LED Lights** (8) on the top panel will flash to show the speaker is powering up.
3. Enable the Bluetooth mode on your Phone, Tablet or other Bluetooth compatible device and set it to search.
4. Select '**AVS1364**' from the search results found by your device which will now pair with the speaker. Once the device has paired with the speaker the LED lights (8) and the LED Indicator (2) will flash slowly and the speaker will chime.
5. Enable the music player on your Phone, Tablet or other device you are using.
6. Press the **Play/Pause/Phone** button (1)  to start and stop (pause) the connected device playing.
7. Briefly press the **Skip Back** — (7) and **Skip Forward** + buttons (4) to change the track being played.
8. Press and hold the **Skip Back** — (7) and **Skip Forward** + buttons (4) to decrease and increase the volume level.
9. Alternatively use your devices controls in the usual manner.

### **Using the AUX/LINE Input**



*The AUX/LINE Input allows a direct wired connection of an external audio device (such as a mobile phone, music player, etc.) via a 3.5mm jack socket input on the rear Panel.*

1. Press and hold the Power button  (3) on the Top Panel for three seconds to power up the speaker.
2. Insert a suitable 3.5mm Jack to Jack lead (14) into the **AUX** socket (9) on the rear panel of the Speaker.
3. The speaker will automatically detect the lead and switch to **AUX** mode.
4. Insert the other end of the lead into the device you are playing from.


5. Press and hold the **Skip Back** — (7) and **Skip Forward** + buttons (4) to decrease and increase the volume level.

### **Handling Telephone Calls**


#### **Answering a Call**

1. A call coming in will mute (cut) the music you are listening to.
2. Briefly press the **Play/Pause/Phone** button  (1) to answer the call.
3. Press and hold down the **Skip Forward** + button (4) to increase the call volume level.\*
4. Press and hold down the **Skip Back** — button (7) to decrease the call volume level.
5. Briefly press the **Play/Pause/Phone** button  (1) again to end the call.
6. The callers voice will be heard through the speaker and your voice will be picked up by the built-in Microphone inside the speaker.

#### **Rejecting a Call**



1. A call coming in will mute (cut) the music you are listening to.
2. Press and hold the **Play/Pause/Phone**  button (1) for two seconds to reject the call.

#### **Making a Call**

1. Whilst listening to music, press and hold the **Play/Pause/Phone** button (1) briefly twice to dial the last call made.
2. Press and hold down the **Skip Forward** button (4) to increase the call volume level.\*
3. Press and hold down the **Skip back** button (7) to decrease the call volume level.
4. Briefly press the **Play/Pause/Phone** button  (1) again to end the call.

\*Two high pitched beeps will be heard warning when the maximum volume setting has been reached.

### **Voice Assistant Operation**

1. Make sure that Siri is activated; Make sure Google Assistant is downloaded and set to default Voice Assistant.
2. Ensure that your phone is Bluetooth paired as described above.
3. Press the  button (6) once.
4. Speak the require command to Siri or Google (whichever type of phone is connected) into the built in microphone on the top panel (5) of the speaker.
5. Press the  button (6) again to cancel the voice assistant mode.

**NB** Google Assistant is available Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device.

### **Care and Use of your Speaker**

- Always disconnect the Speaker from the USB charging supply before cleaning.
- Clean outside of the Speaker with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the Speaker in water or any other liquids.

### Technical Specification

Model Number	AVS1364, AVS1425 & AVS1426
Power Supply/Charger	DC 5V @1A
Total audio output power	2x 5W
Audio Frequency Response	100Hz – 20KHz
Unpacked Weight	Approx. 540gs
Dimensions (Approx.)	Approx. 115 mm (dia.) x 180mm (h)
Operation temperature	0°C to + 40°C
Built in Battery type	Lithium Ion, 3600 mAh
Bluetooth Frequency Range	2402 - 2480MHz
Bluetooth Transmission power	≤-3.325dBm
This product conforms to Radio Equipment Directive 2014/53/EU	



Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



# DAEWOO

## GUARANTEE

This product is guaranteed for twenty-four months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Daewoo Electricals is a registered trademark.  
Produced and imported under licence by ESG Ltd  
Manchester M3 1JS [www.esgltd.com](http://www.esgltd.com)