

DAEWOO
ELECTRICALS



Bluetooth Headphones

AVS1326, 1392, 1393 & 1394

User Manual




IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using your Bluetooth Headphones.
- Before using your Bluetooth Headphones, visually check that the unit is intact and has not suffered any transit damage.
- Only charge the headphones from a suitable USB outlet, any other power source may cause permanent damage to the headphones.
- The headphones must be fully charged via the USB port before use.
- Do not operate this speaker after a malfunction or after being dropped or damaged in any way.
- Never allow children to play with the headphones. Small parts may be a choking hazard.
- Do not allow the USB charging cable to hang over sharp edges or come in contact with hot surfaces.
- These headphones are intended for household use only and should not be used for industrial purposes.
- Do not use these headphones for anything other than its intended use.
- Do not immerse the headphones in water or any other liquids.
- Do not expose the headphones to moisture, rain or humidity, as it is not waterproof.
- Before cleaning, ensure the earphones are not connected to the USB supply.
- Never clean the headphones with solvents or harsh or abrasive cleaners.
- Do not attempt to dismantle the earphones, it does not contain any user serviceable parts.
- Whilst not in use, store the earphones in a cool dry place free from extreme temperatures, humidity or dust.



Description of Parts

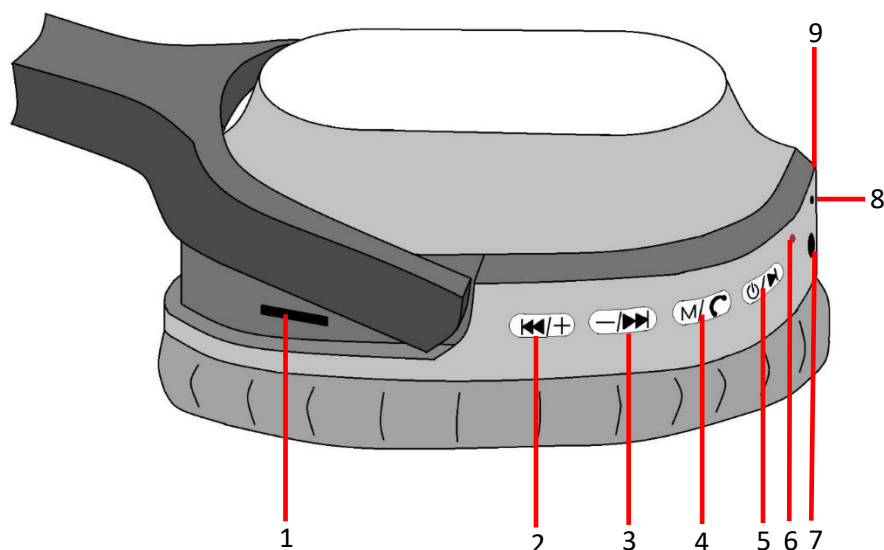

1. Micro SD Player
2. Volume Up/Next Track Button
3. Volume Down/Previous Track Button
4. Mode/Phone Button
5. Power/Play/Pause Button
6. LED
7. 3.5mm Input Jack
8. Microphone
9. Micro USB Charging Port



Charging Your Bluetooth Headphones

Before first using your headphones ensure they are fully charged as follows:

1. Insert the Micro USB plug of the **USB to Micro USB Charging Cable (11)** into the **Micro USB Charging Port (9)** in the Headphones.
2. Insert the large USB plug into a suitable USB charger rated to at least 1 Amp. (most chargers are rated 1 Amp or above).
3. Whilst the Headphones are on charge, the **LED (6)** in the headphones will glow red, once the internal battery is fully charged the **LED (6)** will go out.
4. **NB** Charging time will take approximately 2-3 hours – remove the charging cable once the headphones are fully charged.

Using Your Bluetooth Headphones

Powering Your Headphones On and Off

1. **Power On:** Press the **Power/Play/Pause** button (5) for 3 seconds and the **LED (6)** will flash with Red/Blue colour sequence showing the headphones are ready to pair.
2. **Power Off:** Press the **Power/Play/Pause** button (5) for 3 seconds and the headphones will power down.

Bluetooth Pairing Your Headphones

1. Power up the headphones as described above and the **LED (6)** will flash Red/Blue.
 2. If wearing headphones during power up, a chime will be heard to indicate they are powering up.
 3. Enable the Bluetooth mode on your Phone, Tablet or other Bluetooth compatible device and set it to search.
 4. Select '**AVS1394**' from the search results and the headphones will now pair with your device.
 5. Once the two are paired successfully you will hear another chiming tone to confirm pairing and the **LED (6)** will now illuminate a steady blue colour.
- NB** The Bluetooth Headphones will reconnect automatically after power up if your device has previously paired with the headphones and the pairing process will not be needed.

Playing Music after Pairing

1. Press the **Power/Play/Pause** button (5) to start playing music, press the button again to pause playing music.
2. Press and hold down the **Volume Up/Next Track** button (2) to increase the volume level.*
3. Press and hold down the **Volume Down/Previous Track** (3) button to decrease the volume level.
4. Briefly Press the **Volume Up/Next Track** button (2) to skip to the next music track.
5. Briefly Press the **Volume Down/Previous Track** button (3) to skip back to the previous music track.

Playing Music from a Micro SD/TF Card

1. Insert a Micro SD or TF card (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **MICRO SD** Player (1). **NB** the Micro SD/TF card player supports cards up to 32GB capacity max.
 2. The tracks on the card will begin to play automatically.
 3. Press the **Power/Play/Pause** (5) button to start playing music, press the button again to pause playing music.
 4. Press and hold down the **Volume Up/Next Track** (2) button to increase the volume level.*
 5. Press and hold down the **Volume Down/Previous Track** (3) button to decrease the volume level.
 6. Briefly Press the **Volume Up/Next Track** (2) button to skip to the next music track.
 7. Briefly Press the **Volume Down/Previous Track** button (3) to skip back to the previous music track.
- NB** Pressing the **Mode/Phone** button (4) whilst listening to the Micro SD card will change the listening mode to Bluetooth. Press the **Mode/Phone** button again will return to the Micro SD card.

Handling Telephone Calls

Answering a Call

1. A call coming in will mute (cut) the music you are listening to.
2. Briefly press the **Mode/Phone** button (4) to answer the call.
3. Press and hold down the **Volume Up/Next Track** (2) button to increase the call volume level.*
4. Press and hold down the **Volume Down/Previous Track** (3) button to decrease the call volume level.
5. Briefly press the **Mode/Phone** button (4) again to end the call.

6. The callers voice will be heard in the headphones and your voice will be picked up by the built in **Microphone** (8) in the headphones.

Rejecting a Call

1. A call coming in will mute (cut) the music you are listening to.
2. Press and hold the **Mode/Phone** button (4) for two seconds to reject the call.

Redialling the Last Call

1. Whilst listening to music, press and hold the **Mode/Phone** button (4) for two seconds to dial the last call made.
2. Press and hold down the **Volume Up/Next Track** button (2) to increase the call volume level.*
3. Press and hold down the **Volume Down/Previous Track** button (3) to decrease the call volume level.

*Two high pitched beeps will be heard warning when the maximum volume setting has been reached.

Using Your Headphones 3.5mm Input Jack

If the Headphone battery goes flat whilst in use or the device you are using has no Bluetooth output, plugging your device or audio source into the **3.5mm Input Jack** (7) via the supplied **3.5mm Jack to Jack Audio Cable** (10) will allow normal playback through the headphones.


NB the Bluetooth and handsfree functions will not function whilst using a wired connection.


Technical Specification

Model Numbers	AVS1326, AVS1392, AVS1393 & AVS1394
Battery	300mAh Lithium-Ion Rechargeable Battery
Power Rating	10mW RMS
Headphone Impedance	32Ω
Unpacked Weight	Approx. 168g
Dimensions (Approx.)	Approx. 160 (w) x 70 (d) x 180 (h) mm
Operating Temperature Range	0°C to + 40°C
This product conforms to Radio Equipment Directive 2014/53/EU	



Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

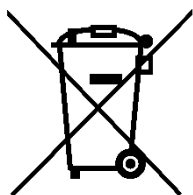

 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



DAEWOO

ELECTRICALS



GUARANTEE

This product is guaranteed for twenty-four months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.