

DAEWOO

ELECTRICALS



Medium Bluetooth Tube Speaker

User Manual



DAEWOO

**2 YEAR
WARRANTY**

Terms and conditions apply.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this Speaker.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Ensure that there is clearance of at least 100mm (4 Inches) minimum around the Speaker for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the Speaker.
- Do not position the Speaker close to sources of heat such as radiators, heaters, other electronic equipment, etc.
- The Speaker shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not immerse the Speaker or its supply in water or any other liquids.
- Do not leave the Speaker unattended during use.
- Do not leave the Speaker unattended whilst connected to the mains supply.
- Always remove the mains supply from the mains socket when the Speaker is not in use, the mains supply must be accessible at all times.
- Close supervision is required when using this Speaker near children.
- Never leave this Speaker within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.
- It is imperative to unplug the power supply after the Speaker has been used, before it is cleaned and whilst being repaired.
- Unplug after each use. Grasp the supply, not the cord.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains supply to ensure no damage is evident. Should there be any signs of damage the product should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the power cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the power cable under carpets, rugs, etc.
- This product is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this product other than those supplied or recommended by supplier.
- Do not use this product for anything other than its intended use.
- Do not push objects into any openings as damage to the product and/or electric shock may occur.

Description of Parts – Control Panel

1. **ON/OFF** – Power Switch.
2. **▶▶** – Press to skip forwards to the next track.
3. **MODE** – Press to select input mode.
4. **SD Card** Player.
5. **▶||** – Press to Play or Pause a track.
6. **◀◀** – Press to skip backwards to the previous track.
7. **LED** Indicator.
8. **USB** – USB Memory Stick Player.
9. **DC 5V** – Power Supply Micro USB Charging Port.
10. **AUX IN** – External line/AUX 3.5mm input jack socket.
11. **VOLUME** – slide right to increase volume and left to decrease volume.



Description of Parts – General



11. Control Panel.
12. Loudspeaker.
13. USB Charging Cable.
14. Micro USB Plug.
15. 3.5mm Jack to Jack Lead



Before the first time you use your Speaker

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.

Charging the internal Battery

Before use, please ensure that the internal rechargeable battery is fully charged as follows:

1. Insert the **Micro USB plug** (14) of the **USB to Micro USB Charging Cable** (13) into the **Micro USB Charging Port** (9) on the speaker.
2. Insert the large USB plug into a suitable USB charger (not supplied) rated to at least 1 Amp. (most chargers are rated 1 Amp or above).
3. Whilst the Speaker is on charge, the **LED** (7) Indicator will glow red, once the internal battery is fully charged the **LED** will go out.
NB Charging time will take approximately 2-3 hours – remove the charging cable once the speaker is fully charged.

NB If desired the USB supply can be left connected to the unit if it is to be used for a long period of time.

Operating Instructions

Using the Bluetooth Mode

1. Power up the speaker by moving the **ON/OFF** switch (1) to the 'ON' position.
2. Once the speaker has powered up the **LED** (7) will flash blue.
3. Enable the Bluetooth mode on your Phone, Tablet or other Bluetooth compatible device and set it to search.
4. Select '**AVS1351**' from the search results found by your device which will now pair with the speaker. Once the device has paired with the speaker a beep will be heard.
5. Enable the music player on your Phone, Tablet or other device you are using.
6. Press the **PLAY/PAUSE** button ►|| (5) to start and stop (pause) the connected device playing.
7. Briefly press the **Skip Forward** ►► (2) and **Skip Back** ◀◀ (6) buttons to change the track being played.
8. Slide the **VOLUME** control (11) right to increase volume and left to decrease the volume level.
9. Alternatively use your devices controls in the usual manner.

Using the AUX/LINE Input

The AUX/LINE Input allows a direct wired connection of an external audio device (such as a mobile phone, music player, etc.) via a 3.5mm jack socket input on the control panel.

1. Power up the speaker by moving the **OFF/ON** switch (1) to the 'ON' position.
2. Insert the 3.5mm jack lead (15) into the **AUX IN** socket (10). The speaker will automatically detect the lead, alternatively press the mode **MODE** button (3) briefly until the AUX input is selected.
3. Slide the **VOLUME** control (11) right to increase volume and left to decrease the volume level.

Playing Music from a USB Memory Stick

1. Power up the speaker by moving the **OFF/ON** switch (1) to the 'ON' position.
2. Insert a USB Memory Stick (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **USB** port (8). **NB** the USB port supports USB 2.0 and up to 32GB capacity max.
3. The tracks on the memory stick will begin to play automatically, alternatively press the mode button **MODE** (3) briefly until the USB mode is selected.
4. Press the **PAUSE/PLAY** button **▶||** (5) to play and pause the memory stick.
5. Briefly press the **Skip Forward** **▶▶** (2) and **Skip Back** **◀◀** (6) buttons to change the track being played.
6. Slide the **VOLUME** control (11) right to increase volume and left to decrease the volume level.

Playing Music from a SD Card

1. Power up the speaker by moving the **OFF/ON** switch (1) to the 'ON' position.
2. Insert an SD card (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **SD Card Player** (4). **NB** the SD card player supports cards up to 32GB capacity max.
3. The tracks on the card will begin to play automatically, alternatively press the mode **MODE** button (3) briefly until the SD player mode is selected.
4. Briefly press the **Skip Forward** **▶▶**(2) and **Skip Back** **◀◀** (6) buttons to change the track being played.
5. Slide the **VOLUME** control (11) right to increase volume and left to decrease the volume level.



Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Care and Use of your Speaker

- Always disconnect the Speaker from the USB supply before cleaning.
- Clean outside of the Speaker with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the Speaker in water or any other liquids.

Technical Specification

| | |
|---|---|
| Model Number | AVS1351 |
| Power Supply/Charger | DC 5V, 1A |
| Total audio output power | 8W |
| Speaker size | 3 Inch |
| Unpacked Weight | Approx. 810gs |
| Dimensions (Approx.) | Approx. 115mm (h) x 115mm (w) x 256mm (d) |
| Operation temperature | 0°C to + 40°C |
| Built in Battery type | Lithium ion, 1200 mAh 3.7V |
| Bluetooth Frequency Range | 2402 - 2480MHz |
| Bluetooth Transmission power | ≤ -3.325dBm |
| This product conforms to Radio Equipment Directive 2014/53/EU | |

DAEWOO

ELECTRICALS



GUARANTEE

This product is guaranteed for twenty-four months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice



Daewoo Electricals is a registered trademark.
Produced and imported under licence by ESG Ltd
Manchester M3 1JS www.esgltd.com