



DAEWOO[®]



SINGLE HOT PLATE

with thermostatic control



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this Hot Plate.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- **DO NOT** touch hot surfaces. The outer surfaces are liable to get hot during use. Always use the handles and knobs.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Do not use this appliance outdoors.
- Do not use this Hot Plate with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.



- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.

NB During the first few minutes of initial use, you may notice a slight odour and a little smoke. This is normal and will quickly disappear, it is the coating applied to the heating elements to prevent any corrosion during transit.

Description of parts



Before the first time you use your Hot Plate

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.

Before using your Hot Plate for the first time, turn the Thermostat control to the highest setting (5) for 3 to 5 minutes to condition the protective coating.

NB This should be the only time the Hot Plate is operated without a cooking utensil on it.

A pan 15 - 17cm in diameter is recommended for best results. Smaller pans are not recommended. Ensure larger pans do not protrude beyond the edge of the Hot Plate or the controls.

Operating Instructions

- Place the Hot Plate on a solid, level non-flammable surface.
- Ensure that Thermostat Control is in the off ●●● position.
- Insert the mains plug into the mains socket.
- Rotate the Thermostat Control clockwise from 0 (low heat) through to 5 (high heat) and leave at the desired setting. The Neon Indicator will light to show the hot plate is heating up.
- Once the hot plate is at the correct temperature and ready to use, the Neon Indicator will go out.
NB the Neon Indicator will go on and off during use to show the temperature of the hot plate is being maintained.
- Return the Thermostat control to the ●●● position and remove the mains plug from the socket after use.

Care and Use of your Hot Plate

- Always disconnect the Hot Plate from the mains power supply and allow to cool before cleaning.
- Clean the outside of the Hot Plate with a soft damp cloth. Never clean the Hot Plate with harsh or abrasive cleaners.
- Do not submerge any part of Hot Plate or its cord in water or any other liquids.

Technical Data


Voltage	:	220-240V AC 50/60Hz
Rated power	:	1500 W
Model Number	:	SDA1731

Electrical Connections

This appliance is fitted with a fused three-pin plug to BS 1363. If the plug has to be removed, it should be cut off and carefully disposed of immediately. To avoid a possible shock hazard, do not insert the discarded plug into a mains socket.

Fitting a new plug


The mains lead must be connected as shown below. The wires are coloured with the following code - Brown wire = Live (L), Blue wire = Neutral (N), Green & Yellow = Earth (E).

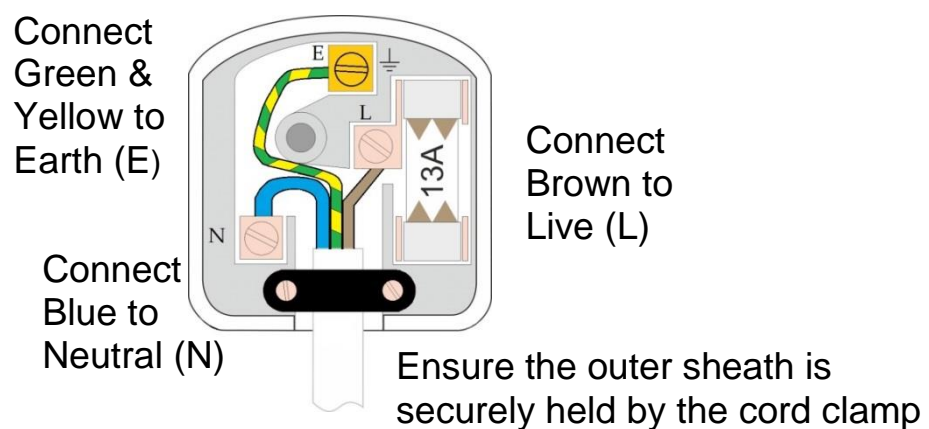

- The Blue wire must be connected to the terminal marked N or coloured Black.
- The Brown wire must be connected to the terminal marked L or coloured Red.
- The Green & Yellow wire must be connected to the terminal marked E or coloured Green.
- Check that there are no cut or stray strands of wire inside the plug.
- Use a 13 Amp BS 1362 fuse, only use BSI or ASTA approved fuses.
- If you are in any way unsure which plug or fuse to use, always refer to a qualified electrician.
- After replacing or changing a fuse on a moulded plug, the cover must be refitted to the plug; the appliance must not be used without a fuse cover.

DAEWOO

ELECTRICALS

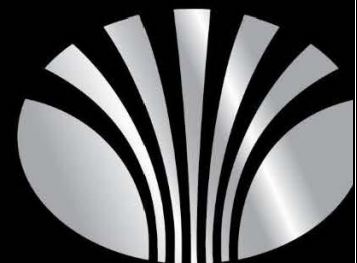

GUARANTEE

This product is guaranteed for 2 years from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal right



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



ESG Ltd
Manchester M3 1JS

www.esg ltd.com

Daewoo Electricals is a registered trademark.

Produced and imported under licence by ESG Ltd