



DAEWOO®

2000W

CONVECTOR HEATER



Bring **warmth** and
comfort to your home.

Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.

This product is only suitable for well insulated spaces or occasional use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this Convector Heater.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.

- **WARNING:** In order to avoid overheating, do not cover the heater.
- Do not install the appliance directly below an electrical socket.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION** — some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- Never place the appliance near to flammable material or high pressure containers. (e.g., Paper, wood, petrol, solvents, spray canisters etc.)
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
- The appliance should not be installed in areas which have a fire-risk, such as garages, stables or wooden sheds; this is applicable also for rooms in which highly inflammable gasses or dust can develop. Danger of fire!!
- Unplug after each use. Grasp the plug, not the cord.


Before the first time you use your Convector Heater

Please read these operating instructions thoroughly and keep them in a safe place for future reference.


Remove all packing materials and discard responsibly.

Assembling your Convector Heater

Before using this heater, the feet must be fitted to the unit. These are attached to the base of the heater using the four self-tapping screws provided, take care to ensure that they are located correctly in the holes at either end of the base of the appliance:

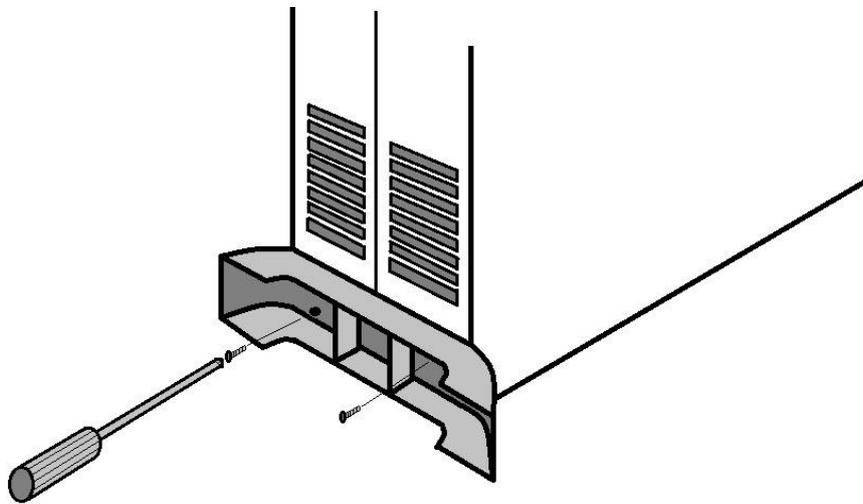

Description of Controls

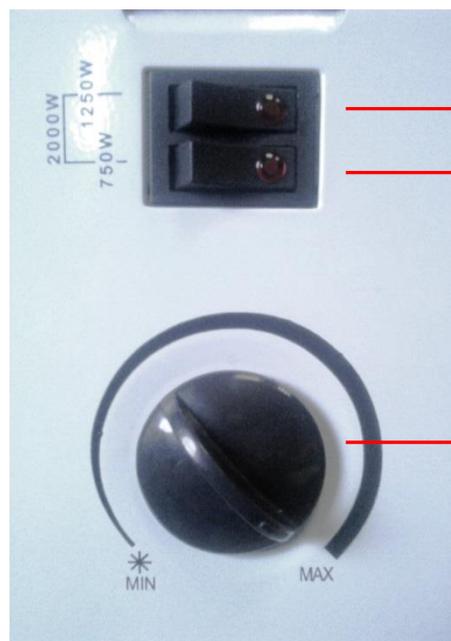

Switch 2
Switch 1
NB Both
Switches are
shown in the
off position

Thermostat

Operating Instructions

- Place the heater on a solid, level non-flammable surface.
- Ensure that both heat Switches (1 & 2) are in the off position.
- Insert the mains plug into the mains socket.
- For the low heat setting (750w), press just Switch 1.
- For the medium heat setting (1250w), press just Switch (2).
- For the high heat setting (2000w), press both switches.
- Rotate the thermostat control clockwise to increase the room temperature and anticlockwise to decrease the room temperature as desired.

NB the Indicators in the switches will illuminate on and off to indicate that the set temperature is being maintained.

- Return both the heat setting switches (1 & 2) to the off position to switch off the heater.

Hint on setting the correct temperature

- Set the heater to the desired heat setting as above.
- Rotate the Thermostat to the maximum position and allow the room to warm up. Once the desired room temperature has been reached turn the Thermostat anticlockwise until the heater just clicks off then turn it back up clockwise very slightly. The Thermostat will now maintain the room temperature, if necessary, further increasing or decreasing the thermostat control may be required to 'fine tune' the ideal room temperature.
- Return both the heat setting switches (1 & 2) to the off position (as below) to switch off the heater.

Care and Use of your Convector Heater

- Always disconnect the convector heater from the mains power supply and allow to cool before cleaning.
- Clean outside of the convector heater with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge any part of convector heater in water or any other liquids.

Technical Data


Voltage	:	220-240V ~ 50Hz
Rated power	:	2000 W (750w + 1250W)
Dimensions	:	390mm (H) x 533mm (W) x 200mm (D)
Weight	:	2.1kg
Model Number	:	HEA1146

Electrical Connections

This appliance is fitted with a fused three-pin plug to BS 1363. If the plug has to be removed, it should be cut off and carefully disposed of immediately. To avoid a possible shock hazard, do not insert the discarded plug into a mains socket.

Fitting a new plug

The mains lead must be connected as shown below. The wires are coloured with the following code - Brown wire = Live (L), Blue wire = Neutral (N), Green & Yellow = Earth (E).

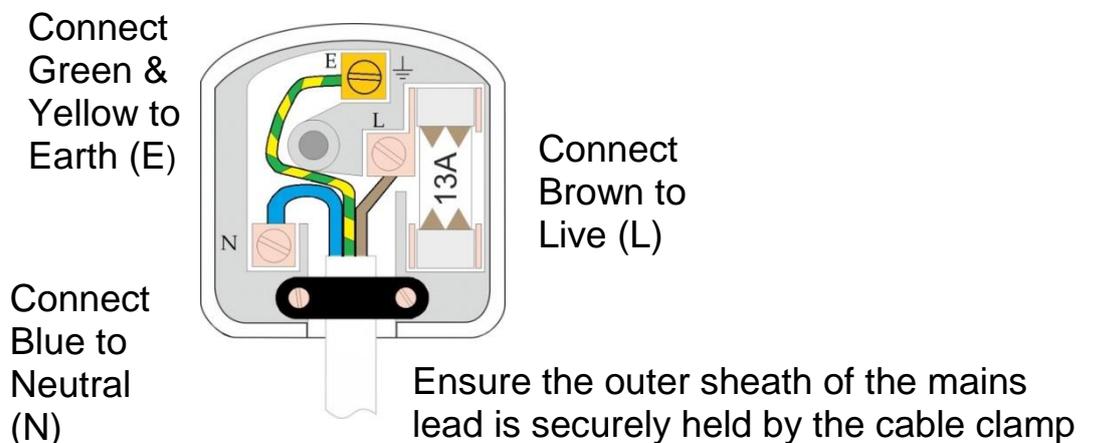

- The Blue wire must be connected to the terminal marked N or coloured Black.
- The Brown wire must be connected to the terminal marked L or coloured Red.
- The Green and Yellow wire must be connected to the terminal marked E or coloured Green.
- Check that there are no cut or stray strands of wire inside the plug.
- Use a 13 Amp BS 1362 fuse, only use BSI or ASTA approved fuses.
- If you are in any way unsure which plug or fuse to use, always refer to a qualified electrician.

DAEWOO

ELECTRICALS



GUARANTEE

This product is guaranteed for twelve months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal right



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



ESG Ltd
Manchester M3 1JS

www.esg ltd.com

Daewoo Electricals is a registered trademark.

Produced and imported under licence by ESG Ltd